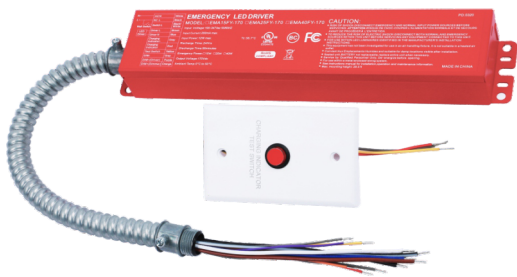


Emergency LED Driver

E2-EM-AFY-20W/40W HV

High Voltage Output



ETL CLASSIFIED



Intertek



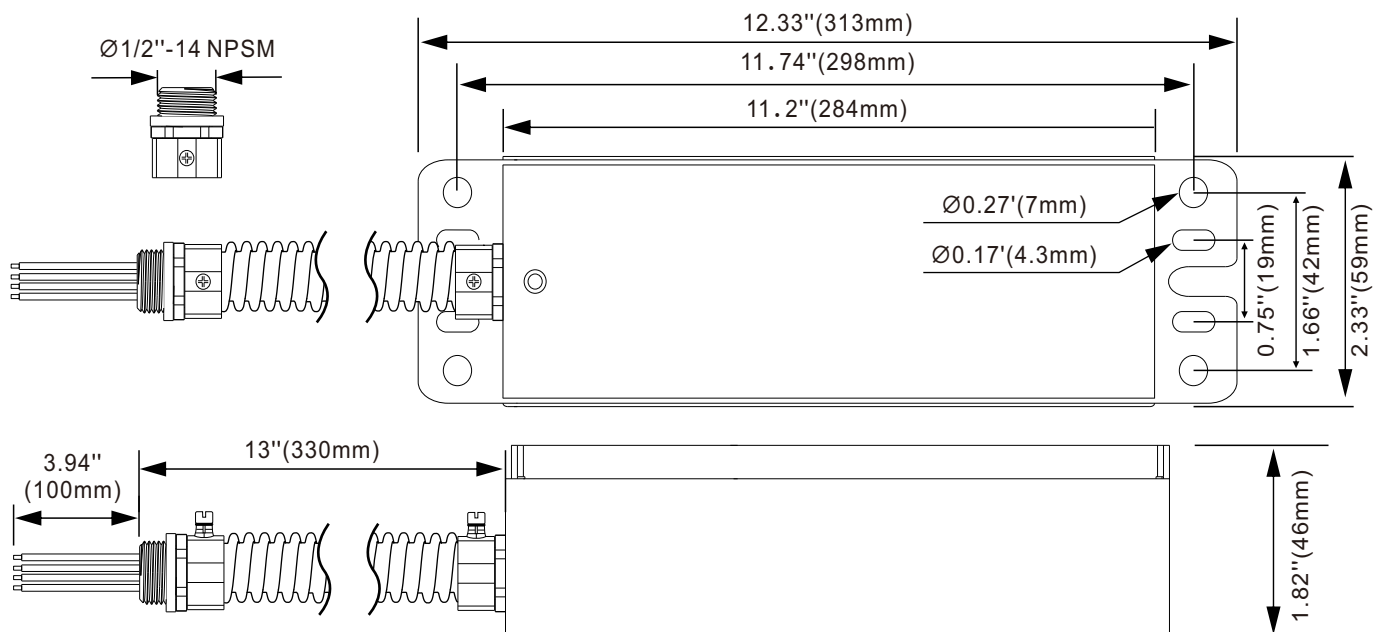
Product Description:

This emergency driver is suitable for 20/40W LED lamps with an external driver. It supplies more than 1.5 hours of emergency power during outages. It can be used in public places to ensure LED lights work normally even during earthquakes, fires, electric circuit malfunctions, etc.

Features

1. Listed for US and Canada
2. Listed to UL924 and tested to CSAC22.2 NO.141 field or factory installation
3. Low energy consumption CEC Title 20 compliance
4. High output voltage
5. Constant output power
6. Self-testing
7. Battery:
 - Over temperature protection
 - Over charge protection
 - Over discharge protection
8. For wiring to the LED driver's AC input

Dimensions

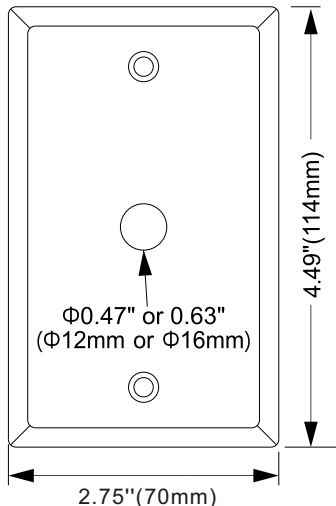





Specifications

Models	Emergency Power	Output Voltage
E2-EM-AFY-20WHV	20 Watts (Constant)	 HIGH VOLTAGE OUTPUT 310-500VDC
E2-EM-AFY-40WHV	40 Watts (Constant)	

Input voltage	277~480Vac.50/60Hz	Input Current	200mA max.
Recharge Power	12W max.	Output Voltage	310-500Vdc
Emergency Power	20W/40W	Recharge Time	24Hrs
Discharge Time	1.5H	Warranty	5Years
Vaux	12Vdc $\approx$ 0.2A	Battery	Li-ion
Ambient Temp	32~122°F(0~50°C)	Surge Protection	Line-Neutral 3KV
Weight	2.69lbs(1.22kg)max.		

Optional accessories

Face Plate	Test Switch
	(A)Metal One-piece Indicator Light 
	(B)Metal one-piece Indicator light 
	(C)Plastic integrated Indicator light 

Installation Manual

!!! IMPORTANT SAFEGUARDS !!!**WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING****Read and follow all safety instructions**

1. **CAUTION**-This emergency driver provides more than one power supply output source. To reduce the risk of electrical shock, disconnect both the normal and emergency source by turning off the A.C. branch circuit.
2. **CAUTION**- Servicing of this equipment should be performed by qualified personnel only.
3. **CAUTION**- Do not attempt to service the battery. A sealed, no-maintenance battery is used that is not field replaceable. Replace the entire unit when necessary.
4. **CAUTION**- The use of accessory equipment not recommended by the manufacturer may cause unsafe conditions, void warranty, and result in non-compliance with UL specifications.
5. **CAUTION**- Connect the emergency driver battery pack to the unit before applying A.C. power.
6. **CAUTION**- The emergency driver requires a un-switched AC power source of 100-347VAC, 50/60Hz. Verify the correspondent electrical rating at the LED fixture before servicing. Both electrical ratings will supply power under an output voltage of 170VDC in emergency mode for at least 90 minutes.
7. **CAUTION**- Battery pack should be charged for 24 hours every 6 months during storage.
8. **CAUTION**- Press the test switch again to turn off emergency mode before shipping.
9. The battery in this unit may not be fully charged. After electricity is connected to the unit for at least 24 hours, normal operation of this unit should take effect.
10. For use in 0°C minimum, 50°C maximum ambient temperatures. Suitable for use in damp locations and plenum spaces.
11. The emergency driver should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
12. Do not use this equipment for anything other than its intended use. Equipment only for LED lighting emergency backup.
13. Do not mount near gas or electric heaters. Do not let power supply cords touch hot surfaces.
14. Do not make or leave any other open holes in the wiring enclosure or electrical component enclosure during installation.
15. The emergency driver contains a battery forbidden for insulation voltage(I/P-O/P) tests.
16. This fixture is for use with grounded, UL Listed, damp location rated, indoor fixtures. Not for use in heated air outlets or hazardous locations.
17. Maximum installation height: 28.5 feet.
18. Do not use outdoors.

Lumen Output During Emergency Operation

The luminaire rated data and maximum mounting height can be found as follows:

1. Determine the fixture efficacy under normal AC operation, based on fixture manufacturer published data in lumens per watt(lm/W).
2. Reference DLC QPL (www.designlights.org) and Energy Star QPL (www.energystar.gov) for rated data on fixture efficacy. If the fixture is not found on DLC or Energy Star qualified product list, contact fixture manufacturer.
3. Multiply fixture lm/W by rated output power of the emergency pack Example 'model' is 25W x 100 lm/W = 2500 Lumens

This product has been designed and tested to compatible with most LED drivers in the market. However, compatibility cannot be guaranteed with all current and future LED drivers or fixtures. So compatibility testing of the end-use system is suggested. Please contact the factory with any questions.

**Caution: Before installation, make certain the A.C. power is off!****STEP 1: INSTALLING THE EMERGENCY LED DRIVER**

- > Turn off the AC power before installing.
- > The test switch and indicator light should be installed where they can be seen depending on the application.
- > The voltage input to the dimmable wires (DIM+, DIM-) of the emergency LED driver must less than 20Vdc.
- > Determine appropriate location for emergency driver on the fixture or using brackets to fix emergency driver on the fixture. The installation instructions of the LED luminaire may provide guidance on mounting location.

STEP 2: WIRING THE EMERGENCY DRIVER

- > Select the appropriate wiring diagram to connect the emergency driver to the driver's AC input. For other diagrams, consult the manufacturer.
- > Use wire nuts to cover unused wires and make sure all connections are in accordance with the NEC and any local regulations.

STEP 3: TESTING

- > After wiring is complete, check if the indicator light turns on or not, which will indicate the battery's charging situation.
- > The battery in this unit may not be fully charged. A short-term discharge test may be conducted after the emergency driver has been charging for 1 hour. Charge for 24 hours before conducting a long-term discharge test.

SAVE THESE INSTRUCTIONS

Wiring Diagram

Caution: The LED fixture must be integrated with the 0-10V driver when LED fixture power is greater than emergency backup unit power.

This emergency driver can only be applied to LED luminaires with an input voltage of 347-480VAC. If the main power is up to 480VAC, the maximum input voltage of the LED driver of the fixture must be 480VAC. For other voltages, please consult the manufacturer.

